

Forensic Keylogger Keyboard QUICK START



Important tips:


- To access data, press and hold password keys KBS together on the keyboard
- Be sure to obey keystroke recording laws and regulations in your country!



Connect the keyboard
to a free USB port

Recording will start
automatically upon power-up


Press and hold the keys
K B S
together for flash drive mode

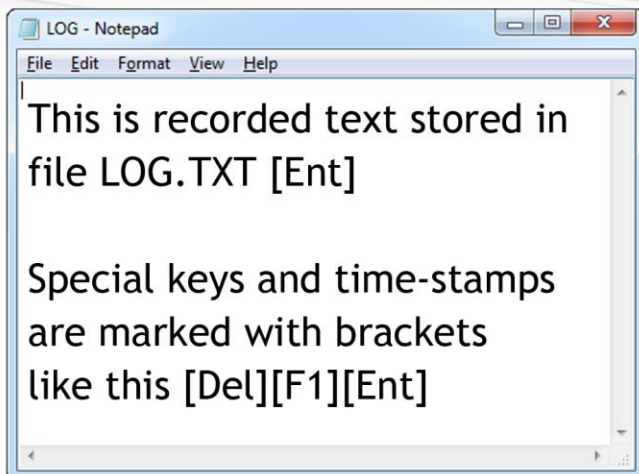

Recorded data is
stored in file

LOG.TXT

To configure the device edit file **CONFIG.TXT** in the flash drive main folder

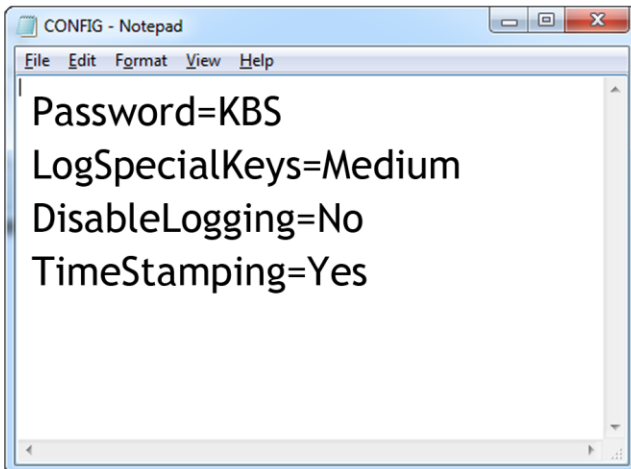

Memorize your password in case you change it. Otherwise access to the device will be impossible!

Password = ABC (must be 3 keys, please memorize!)
LogSpecialKeys = None / Medium / Full
DisableLogging = Yes / No
DisableLayout = Yes / No
TimeStamping = Yes / No (TimeKeeper version only)

To enable a national keyboard layout place a selected **LAYOUT.USB** file in the flash drive main folder

To set the internal clock create **TIME.TXT** in the flash drive main folder

Format = 24 / AM / PM (24h or 12h format)
Year = 2019
Month = 4 (1=January ... 12=December)
Day = 25 (1...31)
Hour = 13 (0...23 for 24h, 1...12 for AM/PM)
Minute = 54 (0...59)
Second = 38 (0...59)

- Available only in the TimeKeeper version
- Set **TimeStamping=Yes** in **CONFIG.TXT**
- The clock will be set upon next power-up

The Pro version has many keystroke generation features, such as text menu mode and a scripting language. Refer to the User Guide for details.

More information is available in the User Guide on the flash drive and on www.keelog.com